

Safety Notices

To avoid a shock hazard:



- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The power cord to your computer equipment must be connected to a properly wired and earthed receptacle.




To Prevent Static Discharge: Discharge static electricity from your body before you touch this product or any part of your computer. You can do so by touching the unpainted (metal) part of your computer chassis.

Product Checklist

Make sure you meet the system requirements and have the following items available before you start your modem installation:

Package Contents

1. 56SPC PCMCIA Modem
2. PCMCIA Phone Cable
3. Quick Start Guide
4. Warranty Card & FCC Notice
5. PC and MAC Floppy Disks
6. Modem Installation CD

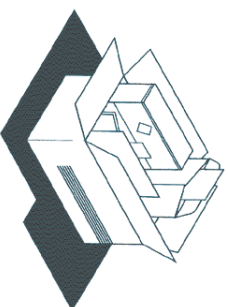

Minimum System Requirements

- Notebook with Type II or III PCMCIA slot
- Windows 95/98/ME/2000/XP or Mac OS 7.5.3 or higher
- 20MB of Hard Disk Space
- 32MB RAM
- CD-ROM Drive
- Standard Analog Telephone Line

Before You Begin (Windows Users)

It is very important to know the drive letter of your CD-ROM drive. Please refer to the instructions below which will determine which drive letters belong to each drive in your system.

You will be prompted during the software installation for the drive letter of your CD-ROM drive. In most cases your CD-ROM will be drive D:. Your drive letter may be different depending on how many hard drives are installed in your system. You can easily find the drive letter of your CD-ROM by Double Clicking the My Computer icon in Windows and locating the icon that resembles a CD-ROM disc. The drive letter is displayed just below the icon.

Hardware Installation

Please follow the steps below to properly install your new modem.

1. Remove any existing modem and modem drivers from your computer. (Please contact your previous modem manufacturer if you are not sure how to do this).
2. Insert the modem into the PCMCIA slot.
3. Using the provided PCMCIA phone cable, insert the RJ-11 connector into an available telephone wall outlet. Insert the other end of the cable into the corresponding connector at the exposed end of the 56SPC modem.
4. Continue to the next section and be sure to follow the route that is intended for your particular operating system.

Windows Driver Installation

IMPORTANT NOTE:

Please insert the modem installation CD into your CD-ROM drive and follow the instructions below that match the operating system being used.

Windows 95 Driver Installation

1. After inserting the 56SPC into your PCMCIA slot the **Add New Hardware Wizard** will appear. Click **Next** to continue.
2. Click **Finish** to complete the installation.

Windows 98 Driver Installation

After inserting the 56SPC into your PCMCIA slot the **Add New Hardware Wizard** will appear. Click **Next** to continue.

1. Select **Search for the best driver for your device (recommended)**, and click **Next**.
2. Check **Specify A Location** and type the location to your CD-ROM drive (Usually **D:**) and click **Next** to continue.
3. Click **Finish** to complete the installation.

Windows ME Driver Installation

1. After inserting the 56SPC into your PCMCIA slot you will see the following message: **Windows has found the following new hardware**. Select Automatic search for a better driver (Recommended) and click **Next**.
2. Click **Finish** to complete the installation.

Windows 2000 Driver Installation

You must login with administrative rights.

1. After inserting the 56SPC into your PCMCIA slot you will be presented with the **Found New Hardware Wizard**. Click **Next** to continue.
2. Select **Search for a suitable driver for my device**. (Recommended) and click **Next**.
3. Check the box for **CD-ROM** drive and click **Next**.
4. Click **Yes** to the digital signature window.
5. Click **Finish** to complete the installation.

Windows XP Driver Installation

You must login with administrative rights.

1. The modem will automatically be detected and a default driver will be automatically installed by the operating system.
2. Click **Start**, **Run** and type: **DEVMGMT.MSC** and click **OK**. The Device Manager will appear. Open the **Modems** section and right click the **PCMCIA V.90 K56flex Fax Modem** and left click **Update Driver**.
3. At the Hardware Update Wizard select **Install from a list or specific location (Advanced)** and click **Next**.
4. Select **Don't search, I will choose the driver to install**, and click **Next**.
5. Click **Have Disk** and type the drive letter to your CD-ROM drive followed by a colon and a backslash (example: A:\ or D:\) and click **OK**.
6. Select the **56SPC V.90 Modem** and click **Next**.
7. Click **Continue Anyway** to the Windows logo testing.
8. Click **Finish** to complete the installation.

(Continued on next page...)

(Continued on next page...)

(Continued on next page...)

Communications Software (Windows)

Include on the Installation CD is a complimentary program called Superfax. Superfax is used to send and receive faxes through your computer.

Windows 95/98/ME/2000/XP: Insert the Installation CD into your CD-ROM Drive. From the desktop click **Start** then **Run** and type:

D:\SUPERFAX\SETUP\EXE (Where **D:** should be replaced with the correct drive letter of your CD-ROM drive). Follow through the on-screen prompts to continue the installation. Towards the end of the installation you may be prompted to insert your Windows CD. If requested this must be done in order for the software to send faxes.

Note: Some computer system users do not have a Windows CD. Instead they have the Windows CAB files pre-installed on their hard disk drives. If you have a system where the Windows CAB files were pre-installed, please refer to your system documentation for the location of the CAB files.

Modem Script Installation (Macintosh)

Insert the Macintosh Modem Installation CD into your CD-ROM drive and use the following instructions to install the modem script. Note: The modem script is only required if you are using either ARA (Apple Remote Access) or OT/PPP (Open Transport PPP). If you are using either FreePPP or AOL to connect then you can skip over this step.

1. Double click your Hard Disk icon. Open the **System folder**. Open the **Extensions folder**. Open the **Modem Scripts folder**. Close all Windows that are open except for the **Modem Scripts folder**.
2. Double click your CD-ROM icon.
3. Arrange the window that you opened on step 2 side by side the modem scripts folder that you opened in step 1.
4. Drag and drop the file **BDP 56K 2.xx (AUTO)** from the CD-ROM window into the modem scripts window.
5. Go to the **Apple** menu, click **Control Panels**, and click **Modem**. **Pull down** the modem list and select **BDP 56K 2.xx (AUTO)** from the floppy disk window. Close this window and click the Save button when prompted. This concludes the modem script installation.

Communications Software (Macintosh)

Included is a complimentary program called FAXstf found on the Macintosh Modem Installation CD. FAXstf is used to send and receive faxes through your computer.

Mac OS 7.5.6 – 9.2: Insert the Macintosh Modem Installation CD into your CD-ROM Drive. From the desktop open the CD-ROM icon. Double click the **SWBUNDLE** folder. Double click the **FAXstf** icon and follow through the on-screen prompts to complete the installation.

Adobe Acrobat Reader Installation

Adobe Acrobat Reader is provided on the installation CD. This program is required to view the copy of this quick start guide which is also located on the installation CD.

Windows users: With the installation CD in your CD-ROM drive double click **My Computer** and double click your **CD-ROM drive**. Double click the **Manual** folder. Double click **Acrobat Reader 5.05.exe** to install the software.

Macintosh Users: With the installation CD in your CD-ROM drive double click the **CD-ROM icon** on your desktop. Double click the **SWBUNDLE** folder. Double click **Acrobat Reader Installer** to begin the installation.

Technical Support

The following options are available for Best Data Technical Support.

Free	Telephone 818-773-9600 (Long distance charges may apply)
Support	Mon – Fri, 8 – 4:30 PST www.bestdata.com

Please provide us with the following information when contacting our technical support staff:

1. Modem Model No. 56SPC rev2
2. Modem Installation CD Version (located on the top of the CD).
3. The version of Windows that your system is running.
4. The manufacturer and model number of your computer.
5. Report any error messages exactly as they appear.
6. Report what you have done to try and correct the issue.

QUICKSTARTGUIDE

56K V.90 PCMCIA MODEM



Quick Start Guide

56K V.90 PCMCIA MODEM

Model: 56SPCrev2

BEST DATA

Copyrighted 2003. All Rights Reserved.
P/N 50020

(Continued on next page...)